



SMOKERIG BBQ

Smokerig Xtender


Cooking System




Assembly Instructions

What your Kit Contains


Main parts

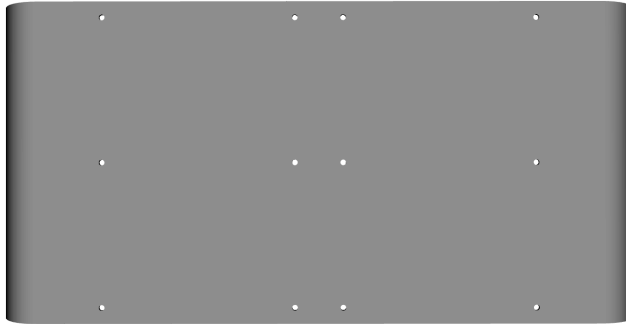


2 x side walls
304 stainless steel 435mm
x 200mm x 85mm

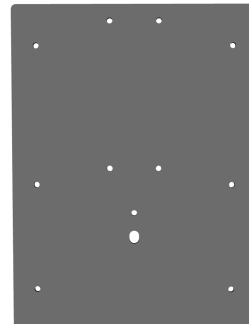

2 x end panels
304 stainless
steel 200mm x
150mm*

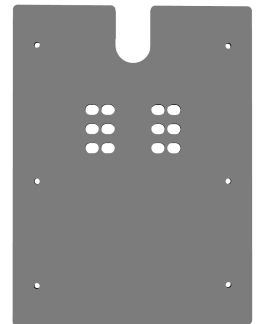

**2 x rotisserie
end panels**
304 stainless
steel 200mm x
150mm

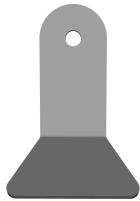

2 x probe hole covers
With fasteners attached
(found in the fasteners bag)



**1 x rotisserie
bracket**
304 stainless steel
95mm x 81mm

Fasteners



4 x
M5 10mm
A2 stainless
bolts



44 x
M3 x 10mm
A2 stainless
bolts



4 x
M5 A2
stainless
wingnuts



12 x
M3 A2
stainless
wingnuts



32 x
M3 x 10mm A2
stainless rivet
nuts




1 x
M5 allen key



1 x
M3 allen key

Assembly Instructions


Step 1: Assemble supporting fasteners into side walls

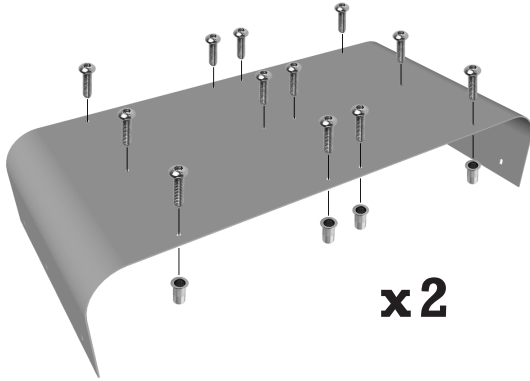

Using **24 x M3 bolts** and **24 x rivet nuts**, fasten the bolts into the side walls with the rivet nuts on the inside. Pliers are not required, simply hand-tight using the allen key provided. These will be the supports for the cooking grates.

Do not use the rivet nuts on the 3 holes at either end of the side walls.


Step 2: Assemble grate supports to end walls

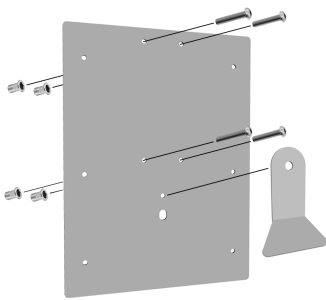

Using **8 x M3 bolts** and **8 x rivet nuts**, fasten the bolts into the end panels with the rivet nuts on the inside.

Assemble the probe hole cover with the spring washer on the inside of the wall.


Step 3: Assemble rotisserie bracket to end wall

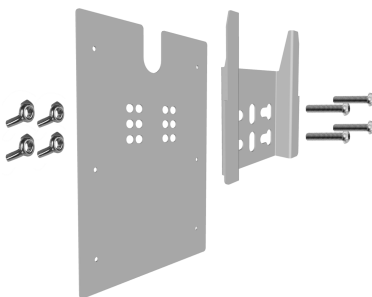

Using **4 x M5 bolts** and **4 x M5 wingnuts**, attach the rotisserie bracket to one of the rotisserie end panels with the wingnuts on the inside.

Adjust height for your own rotisserie motor. You can use your own bracket if preferred.

Step 4: Assemble the walls together

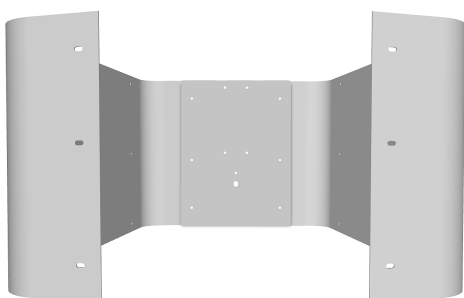

Choose which set-up you are going to use and assemble the end pieces to the side walls, using the remaining **12 x M3 bolts** and **12 x M3 wing nuts**. Loosely assemble the end walls to the side walls so that the end walls are inside the assembly.

Do not tighten the bolts and wing nuts at this stage as you may need to adjust them when placed into the grill to ensure you have the best possible fit.

Step 4: Adjust and tighten

Place the assembly into the *Go Anywhere* and adjust so that there is a tight fit and the side panels are snug against the outer rim of the grill. Place the *Go Anywhere* lid on to check its fit. You can test the fit of the assembly by placing the cooking grate inside and then adjusting if needed. Once there is a good fit, tighten the wingnuts so that the assembly is secure.

Formats



**Smoking/
cooking**



Grilling

Using just one
side panel as a
wind shield



Rotisserie

Contact us

If you have any questions regarding the use or assembly of this product,
or to share your thoughts, please get in touch.

Phone: 01785 711001 / **WhatsApp:** 07421324084

Email: orders@smokerig.co.uk / **Web:** www.smokerig.co.uk

Facebook, Instagram & X: @SmokerigBBQ